


# Installation Instructions

Belgravia Lever. Tubular Latch/Lock, Snib and Strike Install


**MO  
MO  
HANDLES**

## 1. Components

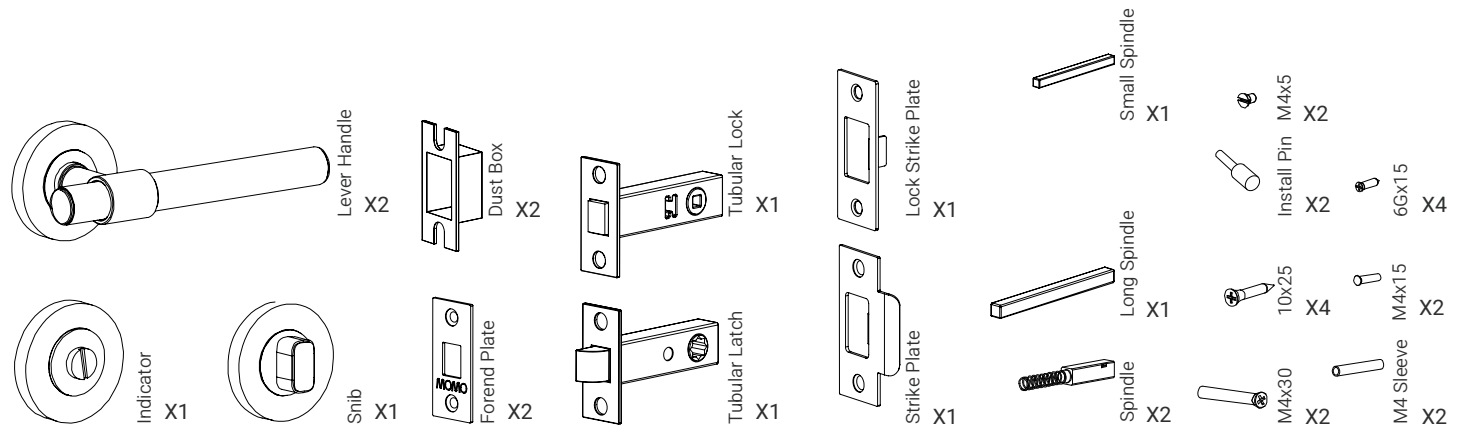


## 2.

Tubular latch/lock and lever drilling dimensions

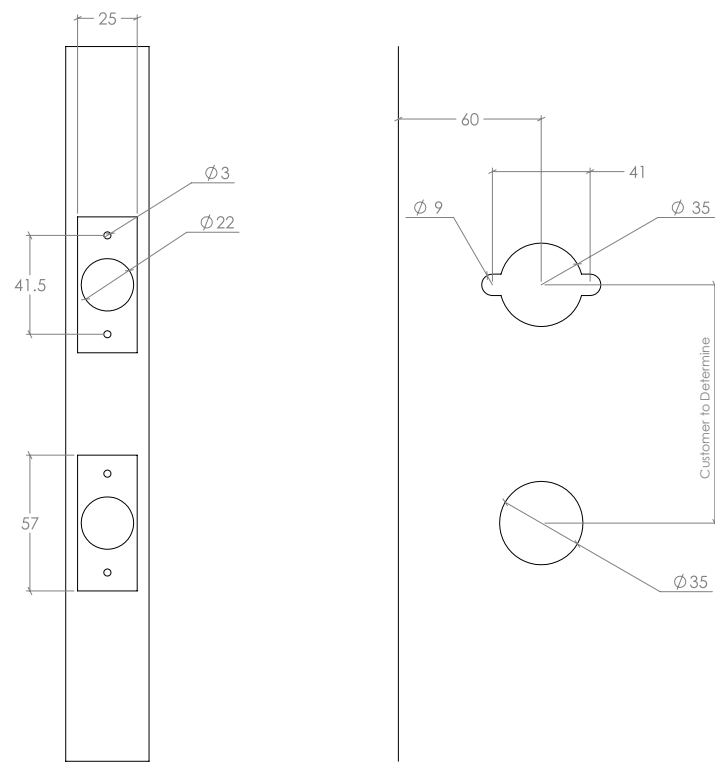

## 3.

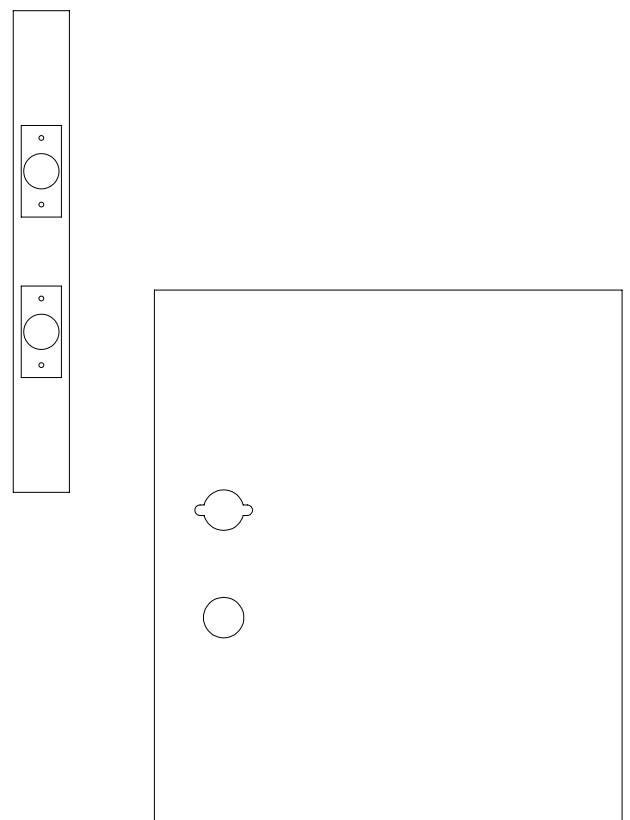


# Installation Instructions

Belgravia Lever. Tubular Latch/Lock, Snib and Strike Install

MO  
MO  
HANDLES


4.

Install Tubular Latch and Lock into the door with associated forend plate using 4x 10Gx25 screws

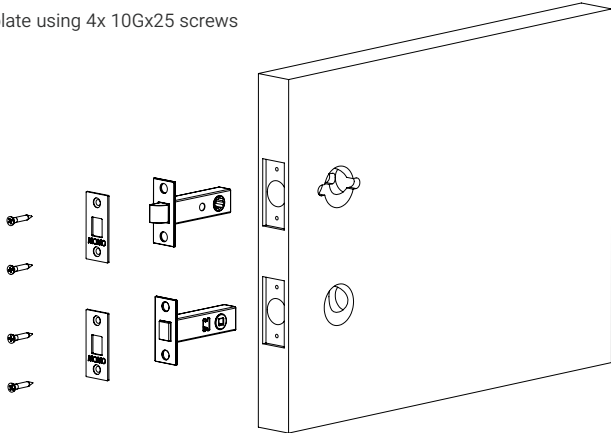



Install Snib, Spindle and 2x 6Gx15 screws

Followed by the rosette cover  
(Hand tighten)

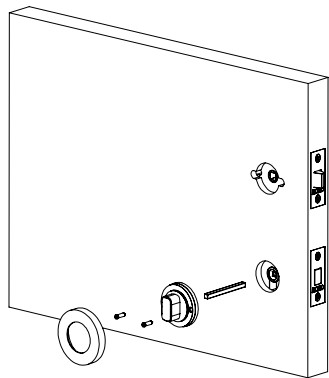

5.

Repeat for other side

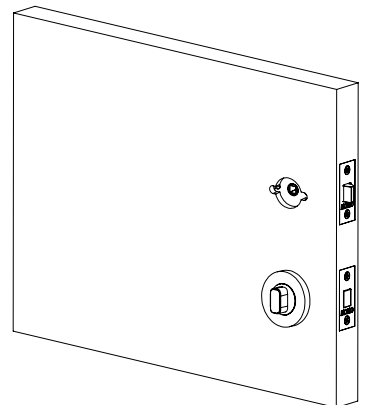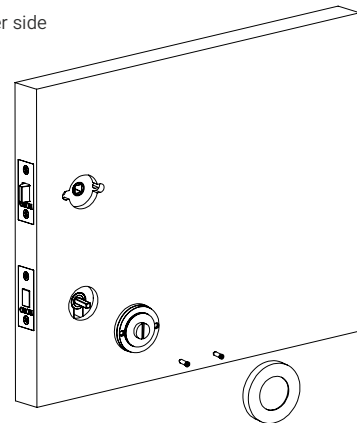


6.


Loosen rosette cover from lever and install 2x M4x15 screw to the Lever

Tighten with the 2x M4 sleeves and insert spindle, spring side first into the lever handle

Install assembly into door

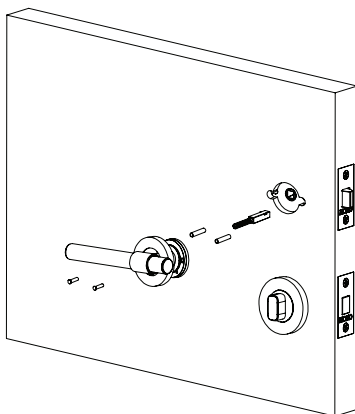


Repeat above step hand tightening  
M4x30 screws

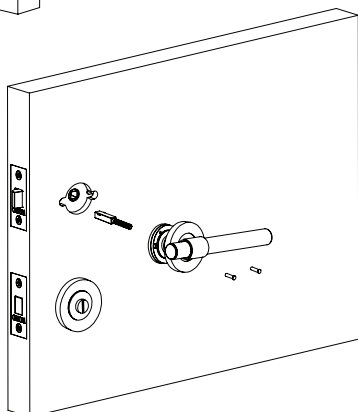

7.

Rotate lever handle down to gain  
better access to the 2x M4x30  
Screws

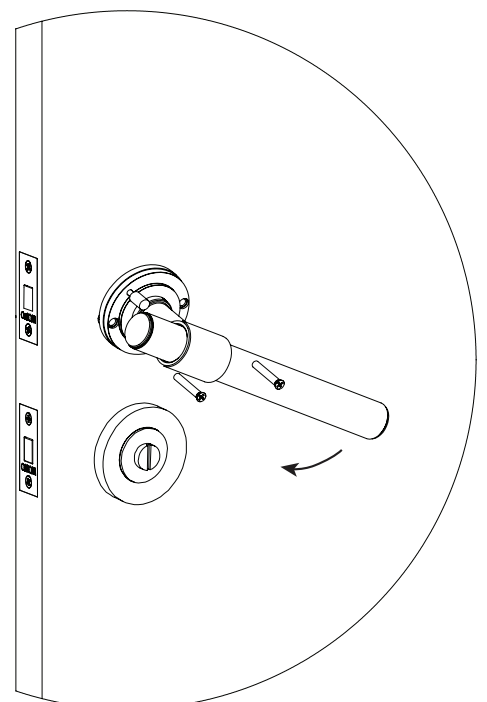

# Installation Instructions


Belgravia Lever. Tubular Latch/Lock, Snib and Strike Install

**MO  
MO  
HANDLES**


**8.**

Insert pin into rosette and release lever

The handle should be locked into a downwards position allowing you to tighten the screws with a screw driver

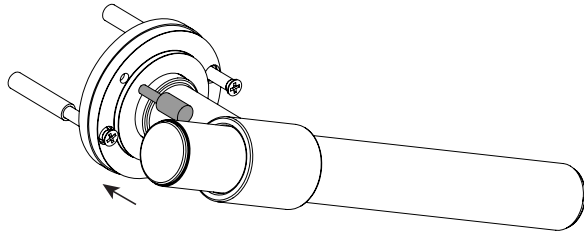


Rear-view of lever showing install pin in position.

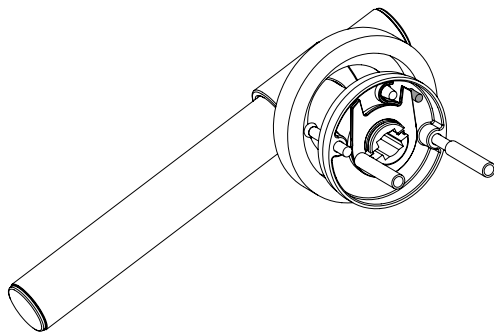


**9.**

Once secured, reinstall rosette covers by hand and remove plastic covering

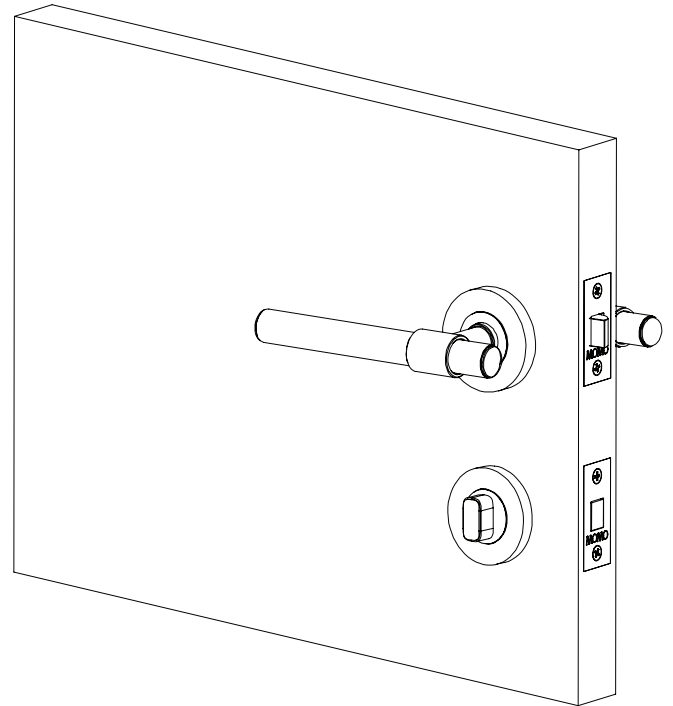


**10.**

Strike Plate Installation Dimensions

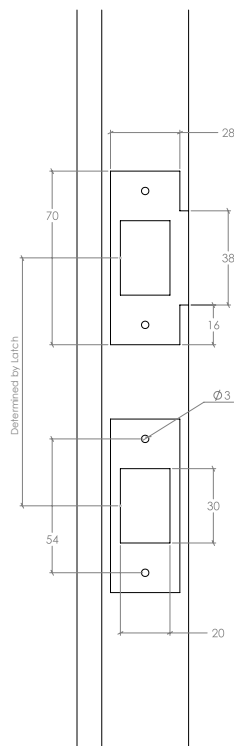

**11.**

Install 4x 10Gx25 screw along with the dust box and strike plate

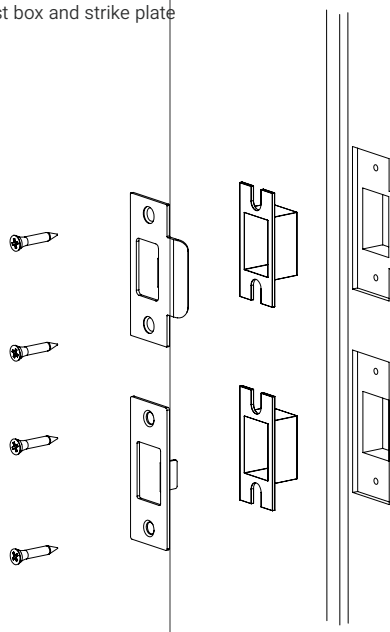

**12.**

