


Installation Instructions

Cavity Slider Install




1. Components

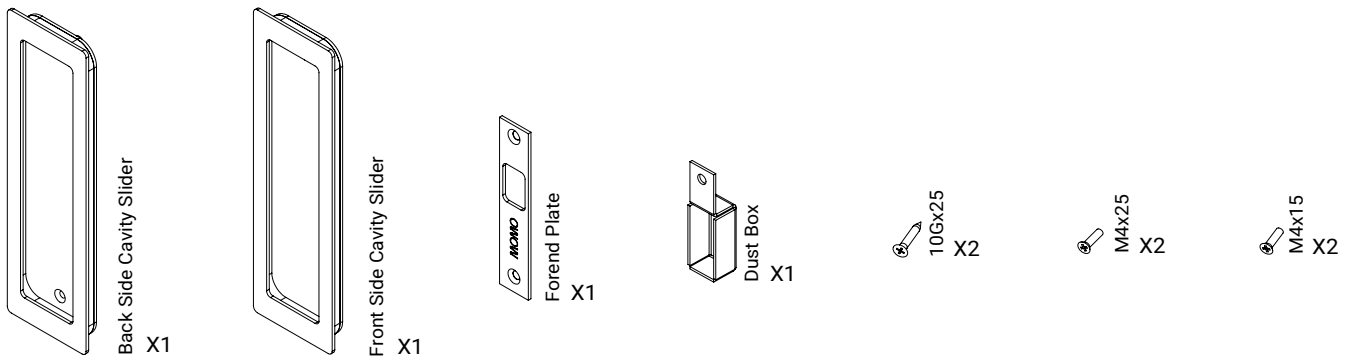


2.

Mortice lock and Cavity Slider drilling dimensions

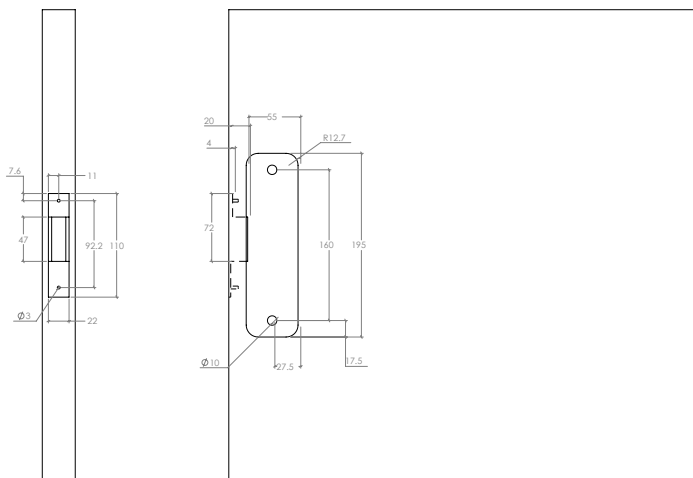

3.

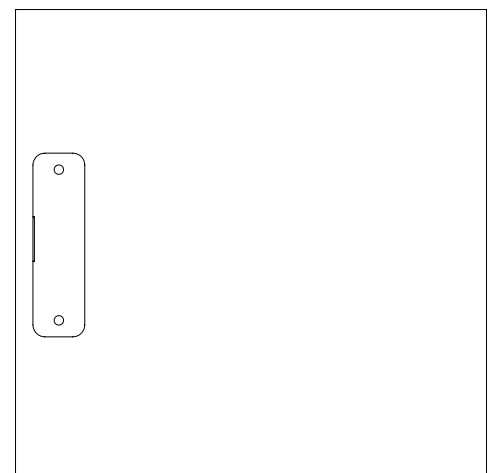

Installation Instructions


Cavity Slider Install

MO
MO
HANDLES

4.


Install forend plate to mortice lock using 2x M4x6 screws

Install assembly and dust box into door using 2x 10Gx25 screws

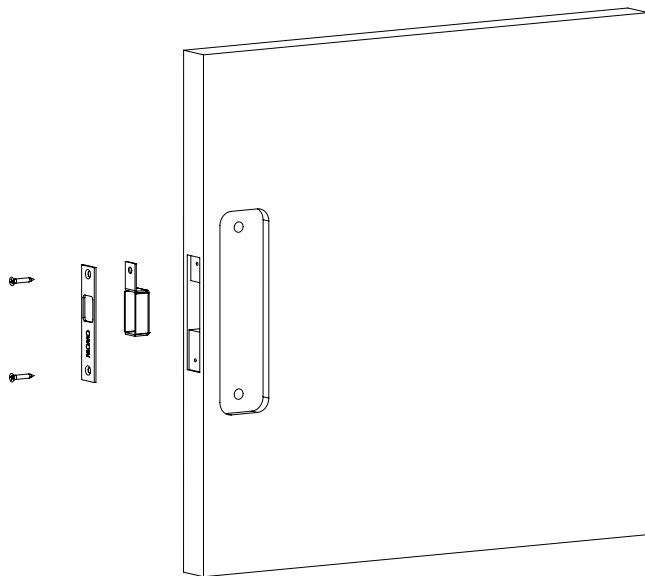


5.

Place Front Side of the Cavity Slider into the front of the door.

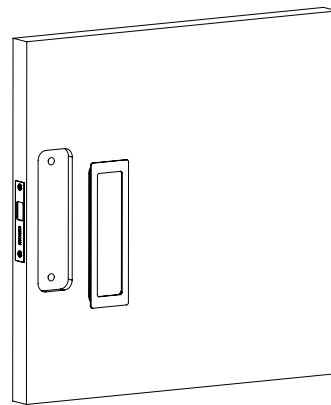

Place Back Side of Cavity Slider into door.

Tighten assembly with the appropriate M4 screws.

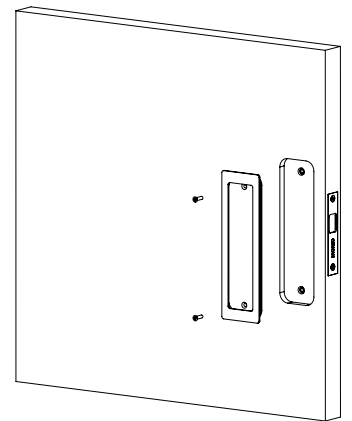

6.

Once secured check fitment and enjoy.

