


Installation Instructions


Cavity Slider. Privacy Mortice, Strike Install




1. Components

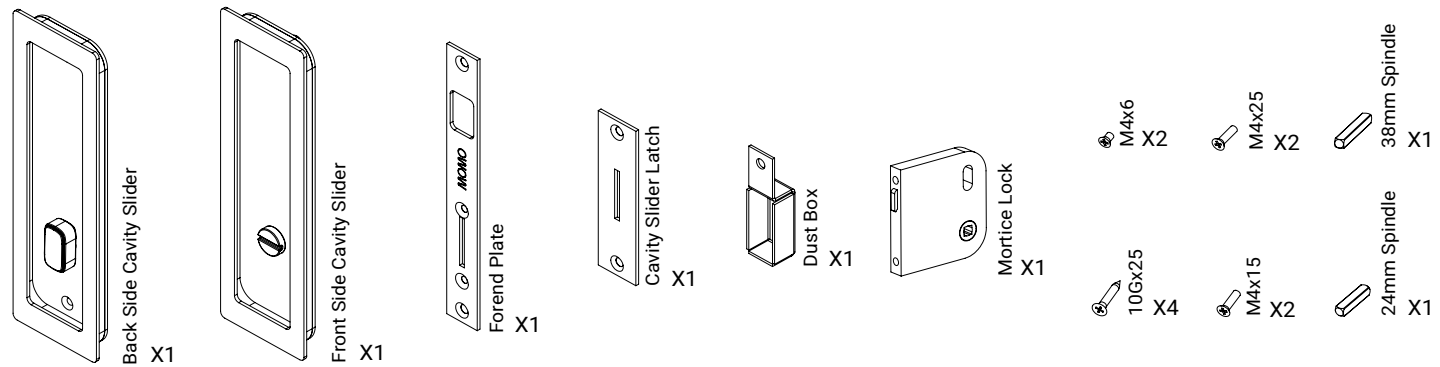

2. Mortice lock and Cavity Slider drilling dimensions

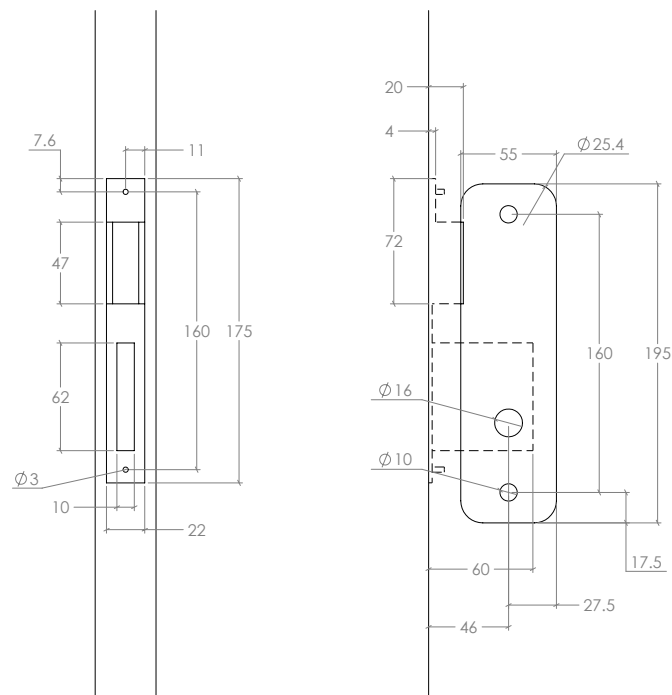

3.

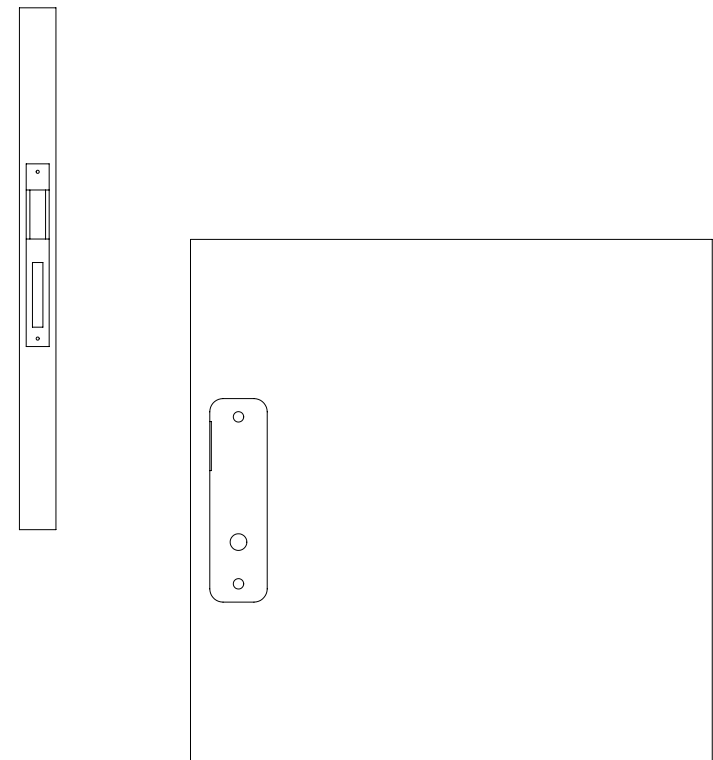


Installation Instructions

Cavity Slider. Privacy Mortice, Strike Install

MO
MO
HANDLES


4.

Install forend plate to mortice lock using 2x M4x6 screws
Install assembly and dust box into door using 2x 10Gx25 screws

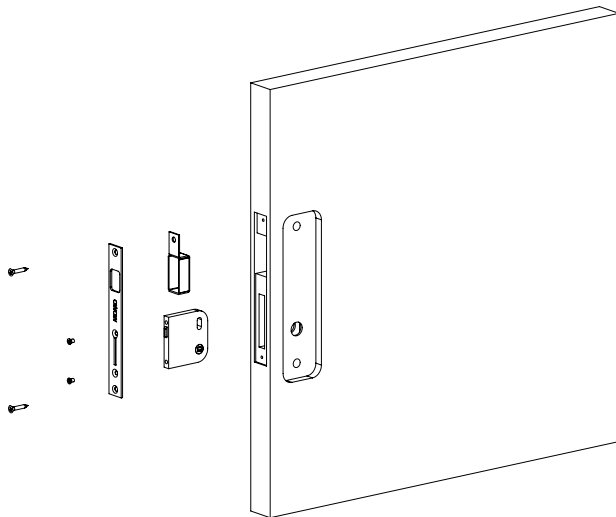

5.


Place Front Side of the Cavity Slider into the front of the door.

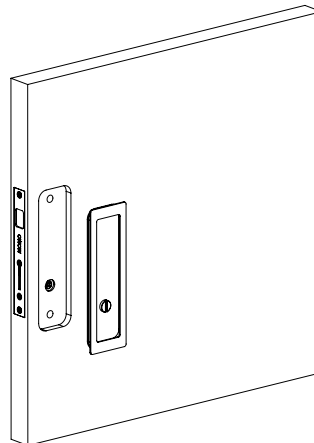

Align the appropriate length spindle into Mortice Lock and indicator in Cavity Slider.


Place Back Side of Cavity Slider into door.

Tighten assembly with the appropriate M4 screws.

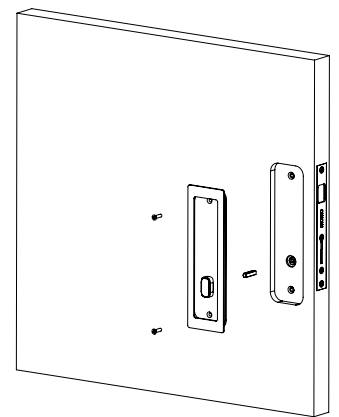


6.

Once secured, check functionality and clearances of Mortice Lock.

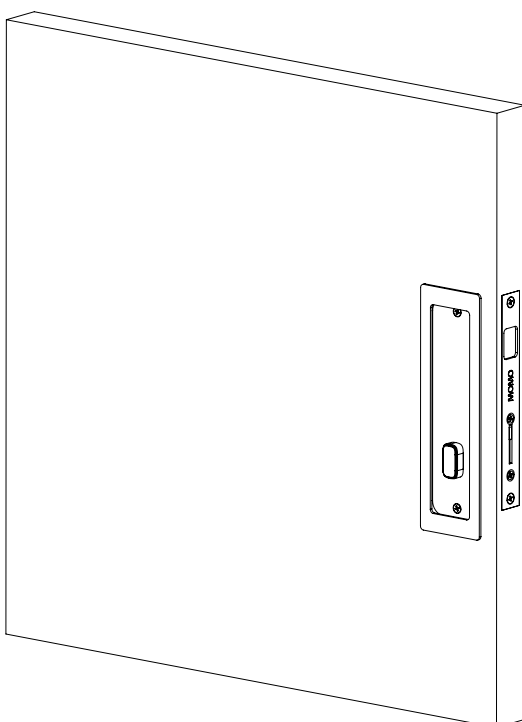

7.

Strike Plate Installation Dimensions

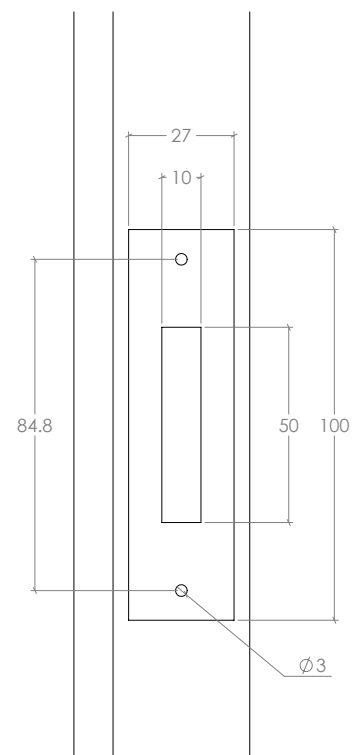


Installation Instructions

Cavity Slider. Privacy Mortice, Strike Install

MO
MO
HANDLES

8.

Install 2x 10Gx25 screws then Strike Plate

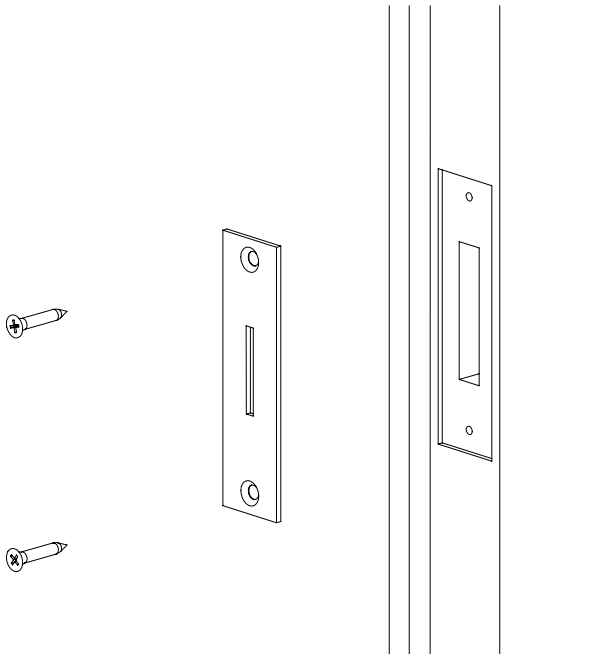

9.

