


Installation Instructions


Roller mortice lock, key barrel and striker

MO
MO
HANDLES


1. Components

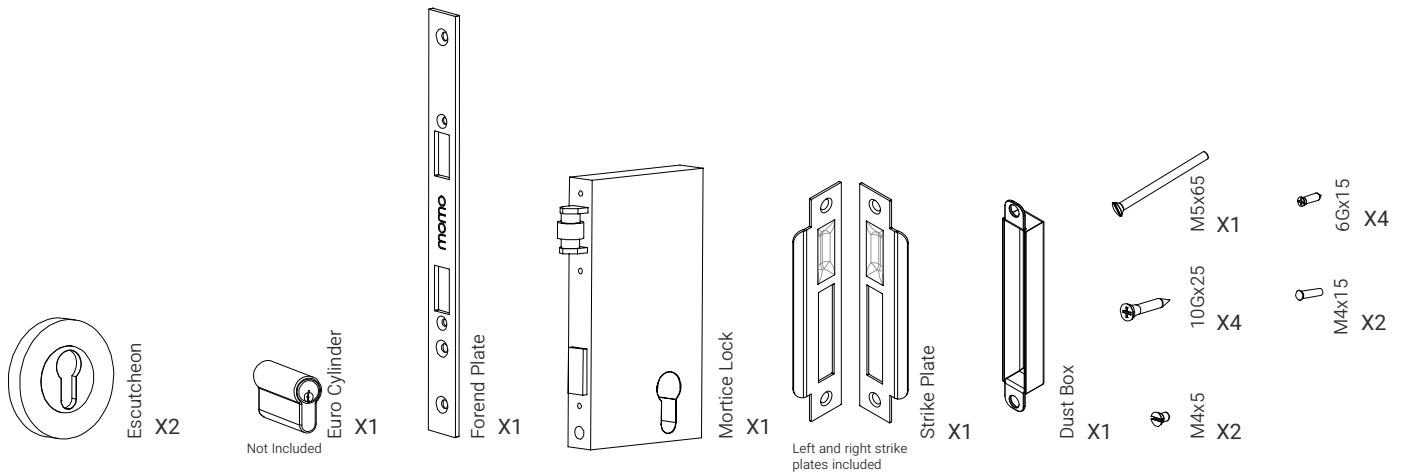

2. Mortice lock

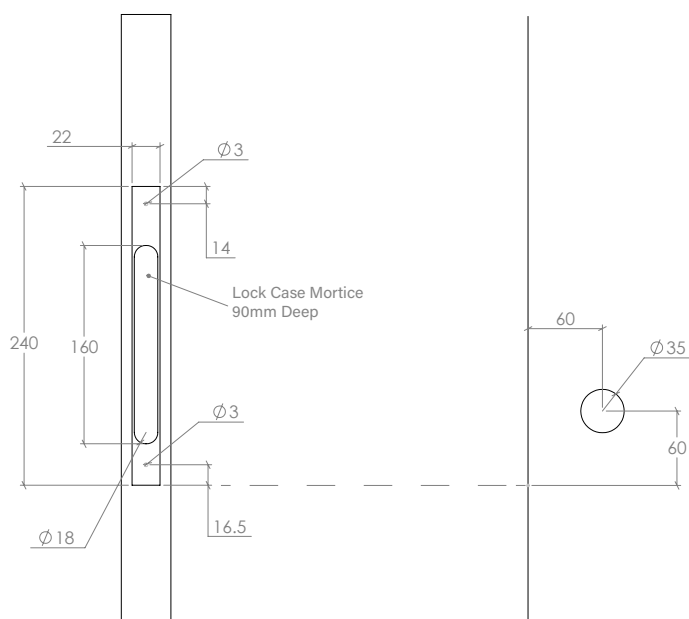


3.

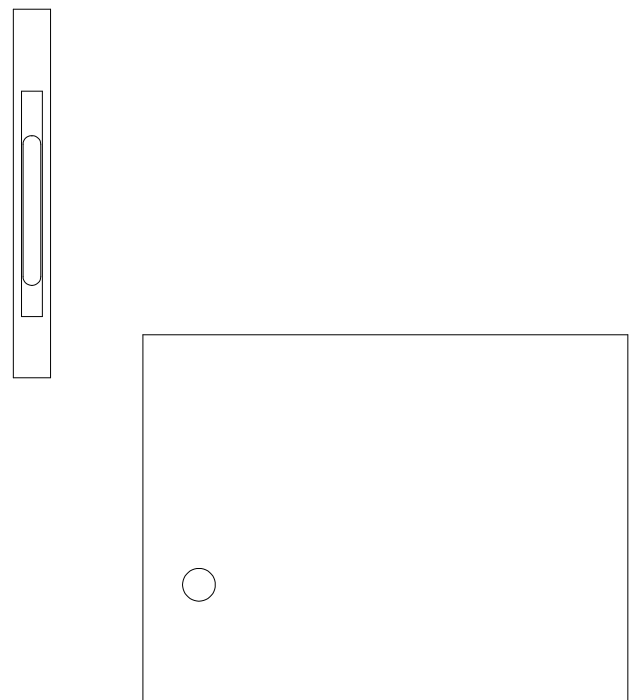


Installation Instructions

4.


Install forend plate to mortice lock using 2x M4x5 screws
Install assembly into door using 2x 10Gx25 screws

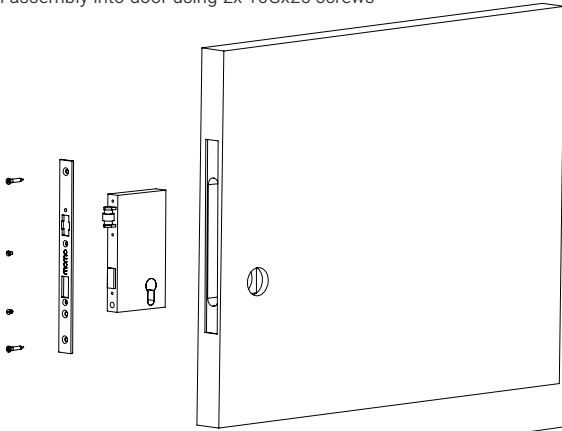


Install eurocylinder securing it with the 1x M5x65 screw

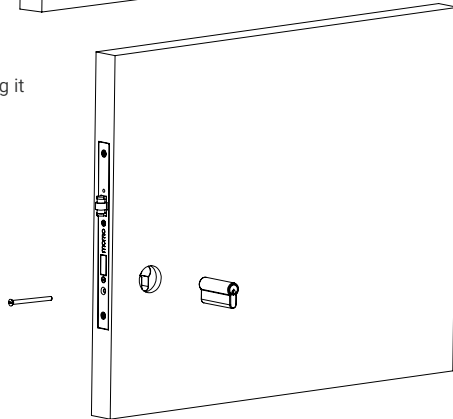


5.

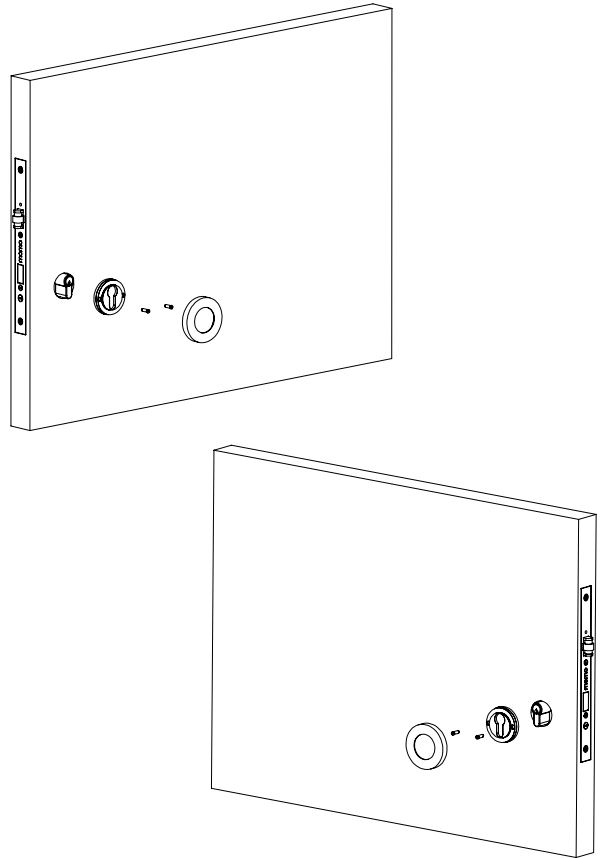

6.

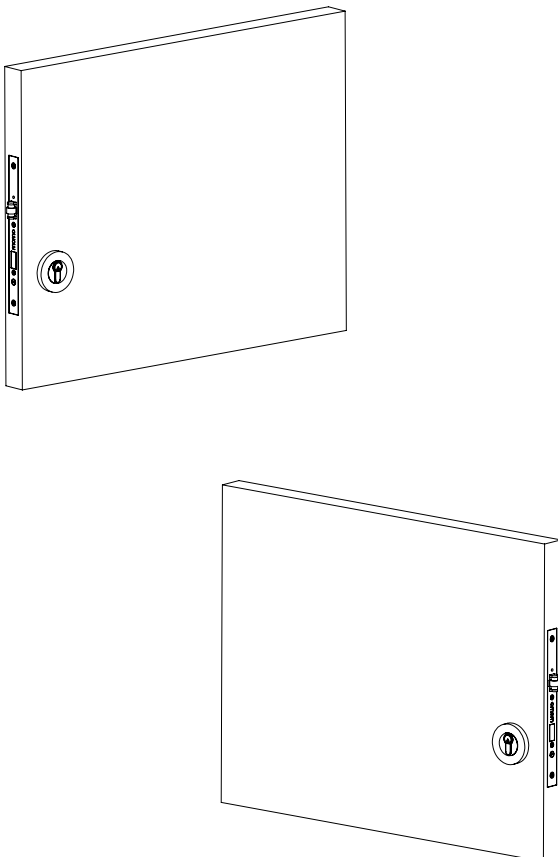


7. Strike Plate Installation Dimensions

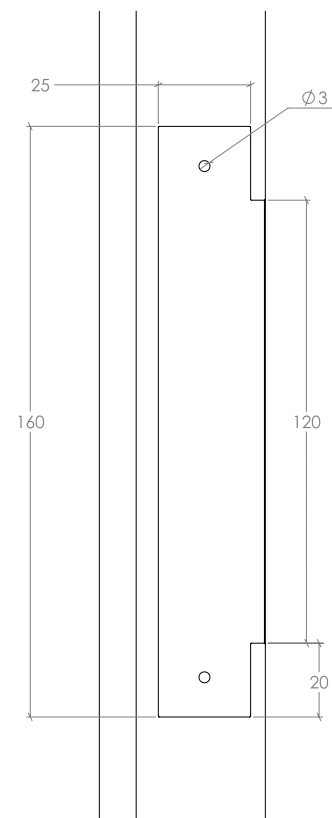

Installation Instructions


12.

Dust plate installation dimensions

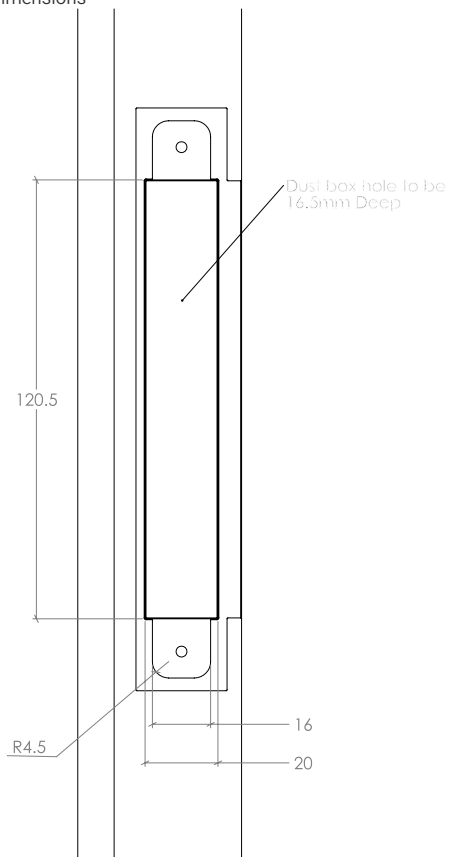

13.

Install 2x 10Gx25 screw along with
Dust box first, then Strike Plate on top

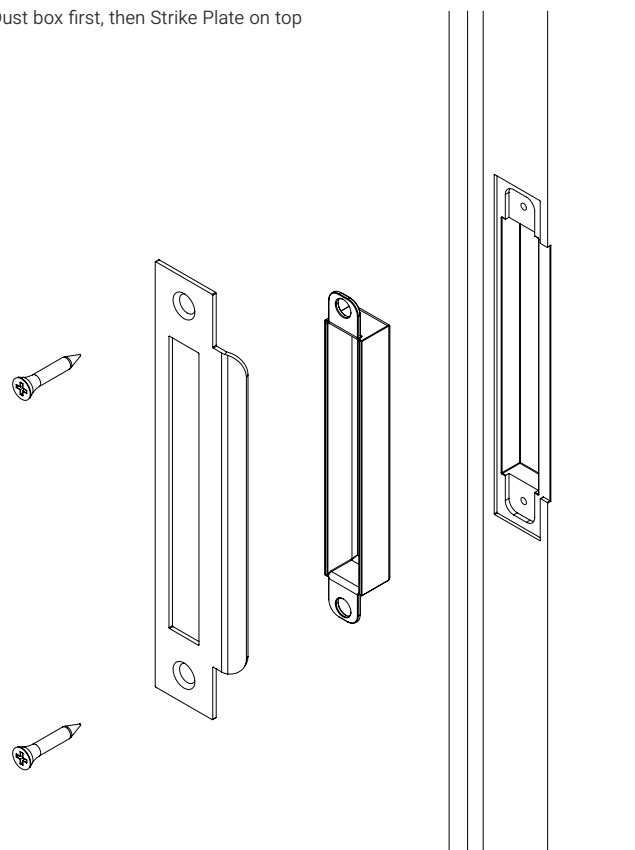

14.

